



Custom Flag Banner Installation

STEP 1

Arrange all poles in order from largest to smallest before assembly.

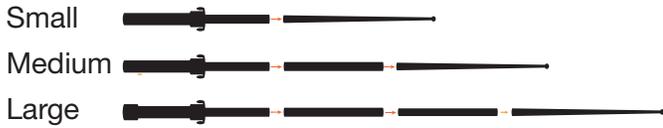

STEP 2

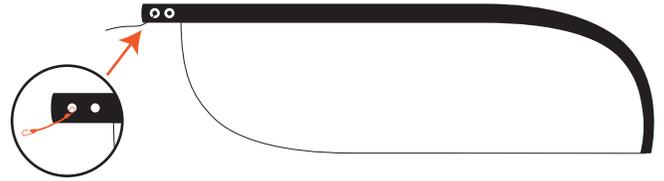


String bungee cord through flag grommet.

*Use top grommet if needed to make flag banner more tight.


STEP 3

Slide banner on assembled pole starting on the smallest end. Make sure to slide the pole completely inside the reinforced pocket at the end of the pole sleeve.

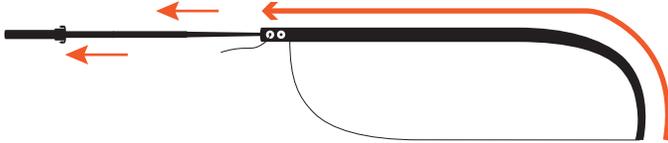

STEP 4

Loop bungee cord over base of largest pole. This will pull the flag tight to the pole.

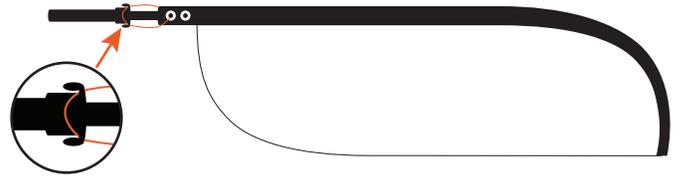

*Use extra bungee cord if single bungee doesn't reach the grommet when looped on pole. **WARNING: To much tension will cause the pole to break.**

STEP 5


Hammer on the top of the main part of the steel rod to install the ground spike.

WARNING: Do not hit the bearing with the rubber hammer or it will break.




STEP 6

Install pole onto ground stake, 2-spike ground stake, or x-base.

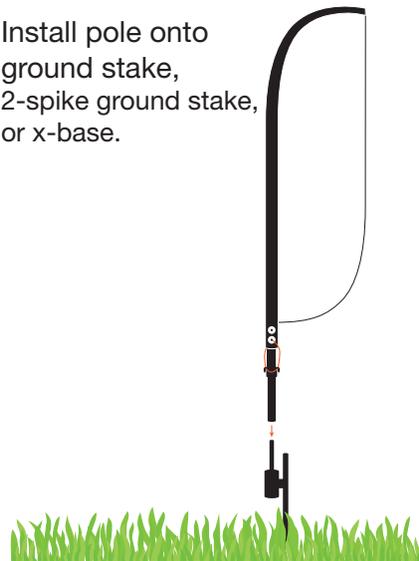

STEP 7

FINISHED

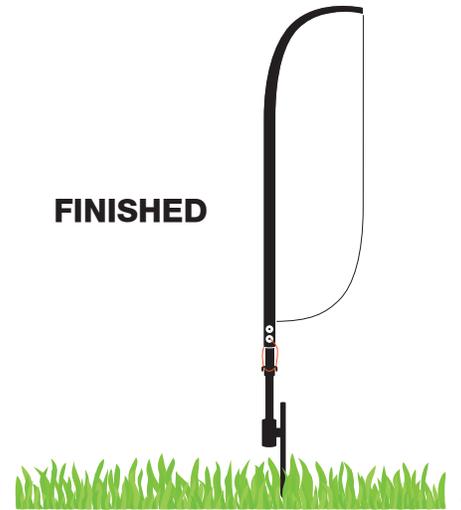

* Periodically check the screw underneath the bearing. It loosens sometimes due to the movement.

Bearing spike/x-stands are moving parts, and need maintenance. It's recommended to oil the entire base before installation. You must maintain the bearing, keep it clean, tight and oiled, or it will break on you. If bases are left outside for long periods of time you must do the maintenance at least once a week. There is no expressed warranty for flag banners or any of the hardware. Flag banners are considered to be temporary signs and the life span is on average of 4 to 12 months depending on weather conditions.

NEVER put the flag banner near any fence, wall, pole, or any other object that will allow the flag to flap against when the wind is blowing, this may cause tearing. It's recommended to bring flag banners indoor during high winds. Flag banners or poles may get damaged during high winds. Life span will shorten if maintenance is not performed.